

TO SET LEVEL SWITCH:

1. MOVE ROD SLOWLY THERE IS AN INTERNAL O RING (IF POSSIBLE LUBE WITH FLUID OR GLYCERIN)


2. ADJUST DRAG SCREWS TO ALLOW ROD MOVEMENT UP AND DOWN

DO NOT OVER TIGHTEN THESE SCREWS

3. ADJUST FLOAT ROD UP AND DOWN TO TRIP FLOAT SW. THEN MOVE DOWN ANOTHER .25" TO SET LOWER FLUID LEVEL LIMIT.

4. LOCK COLLAR AGAINST BRASS BODY AT THIS LEVEL

5. NOTE- SENSOR BOX WILL SHOW 'OK' OR 'LEVEL LOW'

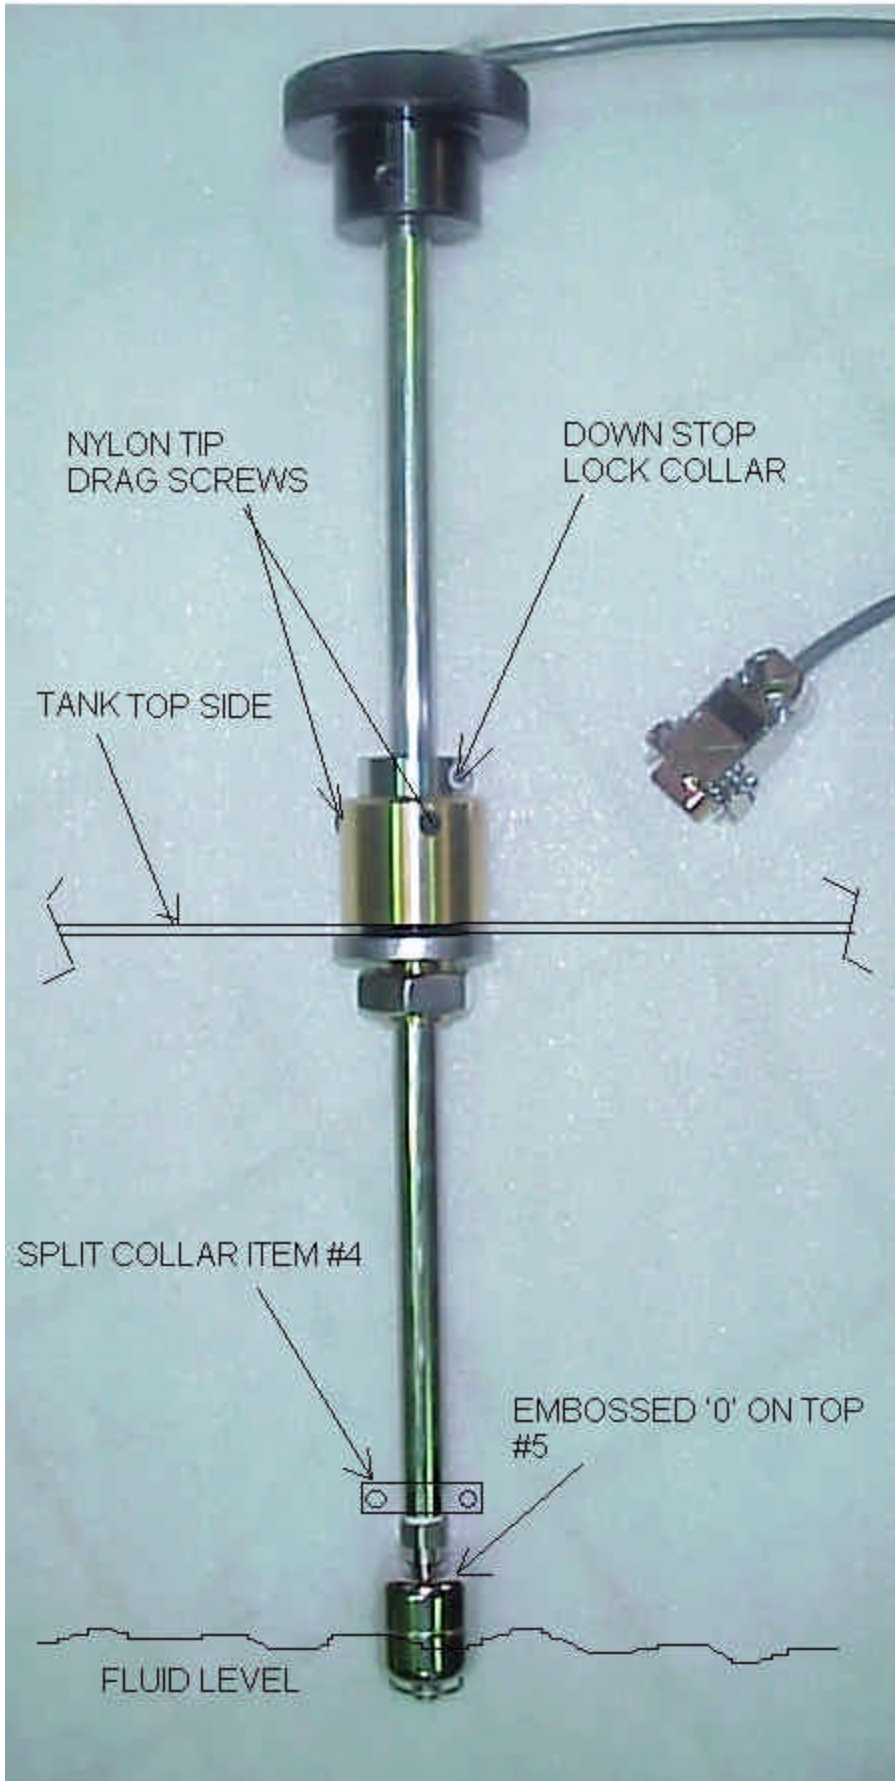

ASSEMBLY INSTRUCTION

1. REMOVE SPRING CLIP AND FLOAT, NUT AND WASHER, FROM THE ASSEMBLY

2. DROP IN FROM TOP THRU .75 DIA HOLE IN RESERVOIR [SET THE O RING IN THE GROOVE UNDER BRASS BODY AS IT CONTACTS RESERVOIR]

3. SLIP ON WASHER AND NUT [INSIDE RESERVOIR] DO NOT OVER TIGHTEN THE NUT_ THIS IS A BRASS BODY.

4. INSTALL SPLIT RING COLLAR AT THE END OF THE TUBE [UP STOP]

**5. RE-INSTALL FLOAT AND SPRING CLIP
IMPORTANT! THE '0' MARK ON THE FLOAT MUST BE FACING UP [TOP SIDE]**

D030087-A HEPI
FLOAT LEVEL
SENSOR
SPEC.pdf